



## VAYU2-3GUC20/4GEC25 Series

### Quick Start Guide




© Yantrr Electronic Systems 2017


© 2017 Yantrr Electronic Systems Pvt. Ltd.  
New Delhi, 110091  
INDIA

# Board Connectors Layout:

## TOP SIDE

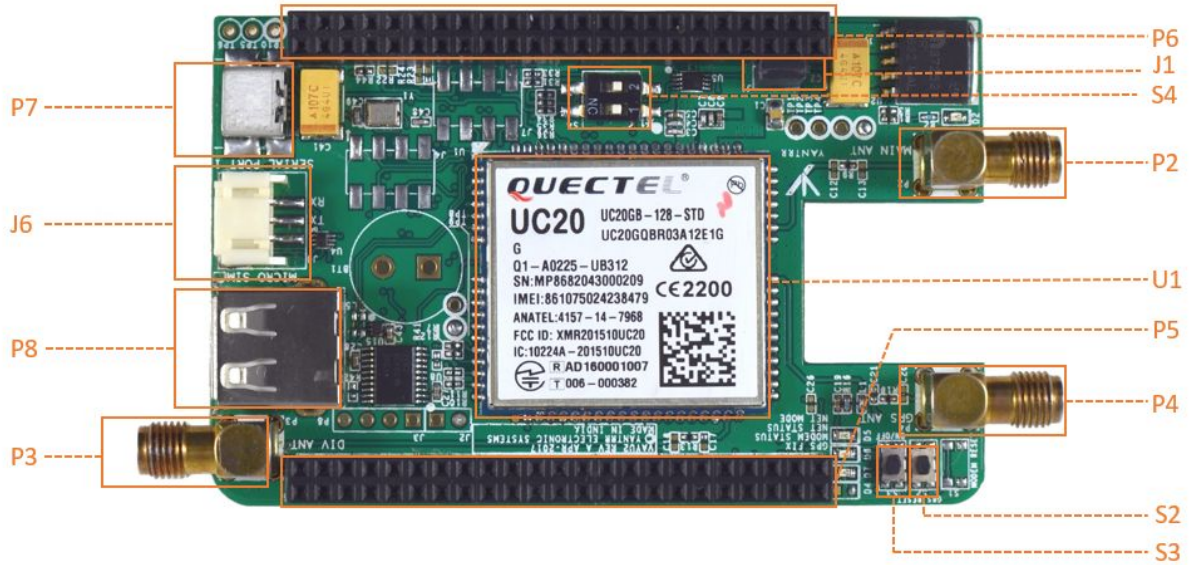

## BOTTOM SIDE

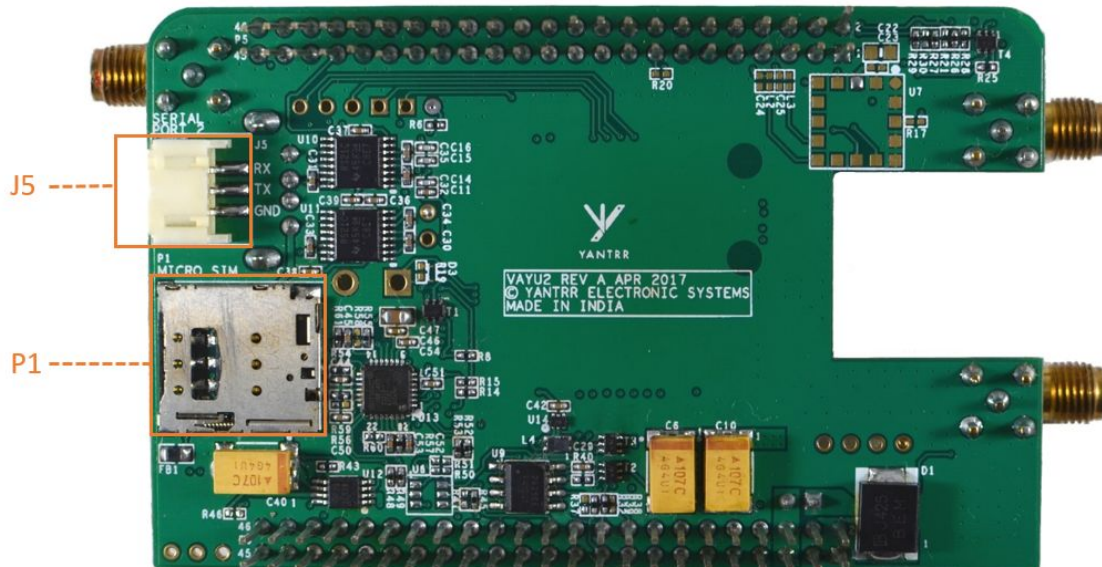

| S No. | Identifier | Description                             |
|-------|------------|---|
| 1     | U1         | 3G/4G Module                            |
| 2     | P1         | Micro SIM Card Holder                   |
| 3     | P2         | MAIN Antenna SMA Connector              |
| 4     | P3         | DIV Antenna SMA Connector               |
| 5     | P4         | GNSS Antenna SMA Connector              |
| 6     | P7         | MINI USB Device Port Connector          |
| 7     | P8         | Alternate USB-A Port Connector          |
| 8     | P5         | Stacking connector with Beaglebone cape |
| 9     | P6         | Stacking connector with Beaglebone cape |
| 10    | J1         | 5V Power Jumper for cape                |
| 11    | J6         | RS232 Serial Port-1                     |
| 12    | J5         | RS232 Serial Port-2                     |
| 13    | S4         | DIP switch for cape                     |
| 14    | S2         | Switch for Module Reset                 |
| 15    | S3         | Switch for Module Power ON/OFF          |


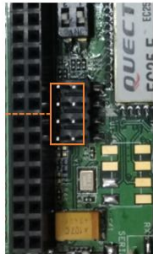


## Specifications:

|              | UC20-G  | UC20-E   | UC20-A                        | EC25-E   |
|--------------|---|--|-------------------------------|--|
| <b>Bands</b> | UC20-G:<br>800/850/900/1900<br>/2100MHz<br>@UMTS<br>850/900/1800/190<br>0MHz @GSM   | 900/2100MHz<br>@UMTS<br>850/900/1800/190<br>0MHz@GSM | 850/1900MHz<br>@UMTS, 3G Only | LTE FDD:<br>B1/B3/B5/B7/B8/B20<br>LTE TDD: B38/B40/B41<br>WCDMA: B1/B5/B8<br>GSM: B3/B8  |
| <b>Data</b>  | HSPA+: Max.14.4Mbps (DL)/Max.5.76Mbps (UL)<br>UMTS: Max.384Kbps (DL)/Max.384Kbps (UL)<br>EDGE: Max.236.8Kbps (DL)/Max.236.8Kbps (UL)<br>GPRS: Max. 85.6Kbps(DL)/ Max. 85.6Kbps(UL)<br>CSD: 14.4Kbps |  |                               | LTE:<br>LTE FDD: Max 150Mbps<br>(DL)/Max 50Mbps (UL)<br>LTE TDD: Max 130Mbps<br>(DL)/Max 35Mbps (UL)<br>DC-HSPA+: Max 42Mbps<br>(DL)/Max 5.76Mbps (UL)<br>UMTS: Max 384Kbps<br>(DL)/Max 384Kbps (UL)<br>TD-SCDMA: Max 4.2Mbps<br>(DL)/Max 2.2Mbps (UL)<br>EDGE: Max 236.8Kbps<br>(DL)/Max 236.8Kbps (UL) |

|                       |  |   |
|-----------------------|--|---|
|                       |  | GPRS: Max 85.6Kbps (DL)/Max 85.6Kbps (UL)   |
| <b>Temperature</b>    | -40°C ~ +85°C  |   |
| <b>Supply Voltage</b> | 3.3V~4.3V, 3.8V Typ.   |   |
| <b>GNSS</b>           | Qualcomm gpsOne Gen8 with 16 GPS channels and 14 GLONASS channels with dedicated GNSS AT Commands  | GNSS: GPS/GLONASS/BeiDou/Galileo/QZSS (Optional)  |
| <b>General</b>        | HSPA+: Release 5/6 (UL Category 6, DL Category 10)<br>GPRS/EDGE: Multi-Slot Class 12 (10 by default)<br>WCDMA: Release 99<br>GSM: Release 99/4<br>3GPP TS27.007, 3GPP TS27.005 and Quectel Enhanced AT Commands  | 3GPP E-UTRA Release 11<br>3GPP TS27.007 and Enhanced AT Commands  |
| <b>Approval</b>       | RoHS Compliant<br>CE/GCF/Vodafone (Europe)<br>DoC (Russia)<br>FCC/PTCRB/AT&T (North America)<br>RCM (Australia)<br>ICASA (South Africa)<br>SRRC/NAL/OFCA (China)<br>JATE & TELEC (Japan)<br>NCC (Taiwan)<br>KC/SKT (Korea)<br>IC/Rogers (Canada)<br>Anatel (Brazil)<br>NBTC (Thailand) | RoHS Compliant<br>CE/GCF/Vodafone* (Europe)<br>FCC/PTCRB/AT&T*/Verizon* (North America)<br>RCM/Telstra* (Australia)<br>JATE/TELEC/DOCOMO*/Softbank* (Japan)<br>NCC (Taiwan)<br>KC/SKT/KT*/LGU+* (Korea)<br>IC/Rogers (Canada)<br>NBTC (Thailand)<br>Anatel* (Brazil)<br><br>* Under Development |

## Jumper Settings:

User can select the RS232 Communication ports Serial Port-1 or Serial Port-2 by using the Jumper J7. Serial Port 1 is the UART1 of the Beaglebone CPU and Serial Port 2 is the UART2 of the Beaglebone CPU.

| RS232 Ports<br>Enabled/Disabled | Jumper J7 Configuration   |   |   |   |
|---------------------------------|---|---|---|---|
|                                 |  |  |  |  |
| Port 1                          | ✓   | ✗   | ✗   | ✓   |
| Port 2                          | ✓   | ✗   | ✓   | ✗   |

## Setting up the system:

1. Place a micro-SIM in the SIM card slot and connect a respective antennas to the SMA connectors. (P2&P3 are SMA Connectors for Connecting GSM antennas, P4 for GNSS antenna).
2. Mount the VAYU2 cape on Beaglebone Black.
3. Ensure the power jumper J1 with other jumpers according to your application.
4. Connect the USB-A to mini-B USB cable provided with the cape between Host port on Beaglebone Black and mini USB device port P7 on Cape.
5. Now power up the full setup using a 5V DC adapter(min 2.5A) to barrel jack. D2 LED on the cape will glow along with LEDs on the Beaglebone black.

*Note: Before powering up ensure correct software image is loaded in Beaglebone black or VIBE/VIBE2*



Before proceeding further ensure D2 LED is glowing properly. Make sure that the adapter being used is of proper rating and has been connected properly.



When using the GNSS Section ensure the GPS Antenna is faced to Open SKY for better accuracy.



Do not try to power up using USB cable alone. Always power up system with a DC adapter. Also while disconnecting power, USB cable should be removed before the DC adapter.



Before powering down the system always ensure to Turn OFF the Module using the PWRKEY turn ON/OFF control pin or using the AT Command *AT+QPOWD*.

## Useful Links :

<http://www.yantrr.com/wiki/VAYU2>

[http://elinux.org/Beagleboard:BeagleBoneBlack\\_Debian](http://elinux.org/Beagleboard:BeagleBoneBlack_Debian)

<http://www.quectel.com/product/ec25.htm>

<http://www.quectel.com/product/uc20.htm>

## FCC Compliance Statement:

1. This product has not been certified to comply with FCC Rule 15 Part B.
2. This product is provided to the buyer as an engineering sample only for evaluation in the buyer's facilities.
3. This product cannot be further sold in USA or used for any other purpose other than evaluation by the original buyer.
4. Yantrr Electronic Systems will not be responsible loss or damage resulting from any use of this product other than as an engineering sample for evaluation purposes.

## Still Have Questions or Technical Issues?

Please post your queries in the online helpdesk portal at <http://support.yantrr.com> or email us at [support@yantrr.com](mailto:support@yantrr.com) for any question you might have providing following details:

1. Product model
2. Serial Number
3. Your address, email address and phone contact information
4. Full description of the issue you are facing